



(1) Programme duration figures (guideline) are valid for maximum temperature wash with no special functions.

Programme		Type of fabrics / Degree of soiling / Notes	Max. Load kg	Detergent and Additives				Options		Temperature °C	Maximum Spin Speed rpm	Programme time approx. min (1)
				Pre-wash	Washing	Softener	Bleach	Half Load	Cold Wash			
	Cotton with Prewash	Heavily soiled sheets, tablecloths, underclothes, shirts etc. in hard wearing and high temperature resistant cotton. The maximum load for heavily soiled washing is 3.5 kg.	5.0	Yes	Yes	*	*	*	*	90	400	130
	Cotton	Moderately soiled sheets, tablecloths, underclothes, towels etc. in hard wearing and high temperature resistant cotton.	5.0	—	Yes	*	*	*	*	90	400	115
	Coloured Cotton	Moderately soiled sheets, tablecloths, underclothes, towels etc. in hard wearing and temperature resistant cotton.	5.0	—	Yes	*	—	*	*	60	400	90
	Synthetics	Lightly soiled shirts, blouses etc., made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or cotton blends.	2.0	—	Yes	*	—	*	*	40	400	70
	Rinse + Spin	This programme allows starch or softener to be added. It is followed by an intensive spin cycle.	5.0	—	—	*	—	*	—	Cold	400	20
	Spin	Programme for intensive spin cycle.	5.0	—	—	—	—	—	—	—	400	10
	Delicates	Delicate fabrics and curtains (dresses, skirts, shirts, blouses, etc.).	1.5	—	Yes	*	—	—	*	40	400	55
	Wool	Machine washable woollens with pure new wool label.	1.0	—	Yes	*	—	—	*	40	400	45
	Rinse + Spin	This programme allows starch or softener to be added. It is followed by a gentle spin cycle.	1.5	—	—	*	—	—	—	Cold	400	15
	Spin	Programme for gentle spin cycle.	1.5	—	—	—	—	—	—	—	400	5
	Drain	Drain only, without spin cycle.	—	—	—	—	—	—	—	—	—	3

N.B.: The excess of detergent in the dispenser could cause technical problems.

ENERGY AND WATER CONSUMPTION DATA

Programme	Temperature (°C)	Load (kg)	Water (l)	Energy (kWh)	Programme time (min)
Cotton	90	5.0	72	1.80	115
Coloured Cotton	60	5.0	72	0.96	90
Synthetics	40	2.0	66	0.35	70
Delicates	40	1.5	70	0.65	55
Wool	40	1.0	70	0.55	45

Programmes with prewash last about 15 minutes more than programmes without prewash. Water and energy consumption values were measured in standard conditions in compliance with the Standard IEC 60 456. Individual consumption may vary in comparison with the values specified in the table, because of differences in supply water pressure and temperature, the load and the type of wash.


ADDING DETERGENT AND ADDITIVES

Pour the detergent and additives into the respective compartments as follows:

- Programme with pre and main wash
- Main wash programme without prewash
- Fabric softeners and starch
- Bleach
- Stain removers
- Anti-scale agents (water hardness 4)

Important Note:

- Do not fill beyond the “MAX” level mark.
- For programme with prewash: do not use liquid detergent.
- For programmes without prewash from cold to 40° C, it is recommended to use a liquid detergent to avoid whitish residues on the coloured laundry.

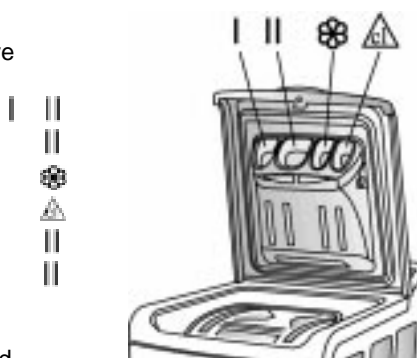

CLOSE THE DOOR AND SELECT THE PROGRAMME

- Turn the **programme selector knob** clockwise to the desired programme.

SELECT ANY DESIRED OPTIONS

“Half Load” button

- Reduces the water consumption in the “Cotton” and “Synthetics” programmes especially during the rinse.
- Especially suitable for lightly soiled or small loads (reduces the quantity of detergent).
- Not suitable for high temperature programmes.

“Cold Wash” button

- This option suppresses the heating of the water.
- You can use this option with all washing cycles.

PROGRAMME START

Open the water inlet tap and press the On/Off button “”. The pilot lamp lights up.

DOOR LOCK

During the running programme, the door cannot be opened.

The door locks automatically in all programmes.

If the programme is stopped or if an electrical power failure occurs, the door unlocks automatically after about 1 minute.

PROGRAMME END

- The programme selector knob is at “STOP”.
1. Press the On/Off button “”. The pilot light goes out.
 2. Cancel the options by pressing the appropriate buttons.
 3. Turn the water supply tap off.
 4. Wait for the door to unlock (about 1 minute).
 5. Open the door and the drum flaps and unload the machine.

SELECTING A NEW PROGRAMME, SPIN SPEED, OPTIONS AFTER PROGRAMME START

1. Press the On/Off button “” to switch off the appliance. The pilot light goes out.
2. Select the new programme and options.
3. Press the On/Off button “” to switch on the appliance. The pilot light lights.

TO STOP, RESET A PROGRAMME BEFORE THE END

1. Press the On/Off button “” to switch off the appliance. The pilot light goes out.
2. Set the programme selector on “Drain”.
3. Press the On/Off button “” to start the “Drain” programme. Only open the door when the programme selector is at “STOP” and the door is unlocked (after approximately 1 minute).